

Oil Service Units

UM 045 · UMPC 045

Oil service - simple, guick and compact · with integrated particle monitor







UM 045



UMPC 045



OPCom Particle Monitor (integrated in UMPC)

- > Easy filling, cleaning and pumping over
- > Unbeatable ergonomics, comfortable handling
- > High filtration efficiency
- Optionally with integrated particle monitor
- > With integrated humidity sensor
- > With automatic switch-off function

Description

Oil service units

Easy, compact and ergonomic

With the oil service unit UM 045 · UMPC 045, hydraulic or lubrication systems can simply be filled, cleaned or fluid can be transferred without using the filter function. The compact size and ergonomic design allows for easy handling in minimal work spaces.

Protection of components through ultra-fine filtration
The EXAPOR®MAX 2 ultra-fine element is the heart of the
ARGO-HYTOS oil service unit. A high separation efficiency
guarantees excellent cleanliness levels and thereby maximum
protection of components. The high dirt holding capacity of the
EXAPOR®MAX 2 ultra-fine elements makes the oil service units
an economical choice for our customers.

UM 045

The UM 045 comes ready to connect, equipped with hoses. For easy transport, the electrical cables, as well as the suction and return hose, are fixed with support fixtures onto the carrier device. Additional tools can be stowed in the basket of the carrier device.

UMPC 045


The UMPC may be switched off, based on the cleanliness class. Once the desired value has been reached or fallen below for three consecutive times, the device switches off.

In versions -*5735, a particle monitor and a humidity sensor are integrated. Here, the particle classes as well as %rH and temperature are output.

In versions -*5835, a particle monitor and an oil condition sensor are installed. Here, the particle classes %rH, temperature, permittivity and conductivity are issued.

Via a WLAN SD card, data can be transmitted to a computer or a smartphone during measurement. In case data transmission should not be possible, the data is meanwhile stored on the SD card and can be retrieved at a later point in time.

www.argo-hytos.com

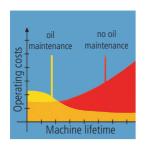

Economical

The UM 045 Oil Service Units offer protection that can extend the lifetime of machinery. This protection gives a direct return on investment through extended service intervals and increased machine availability.



User-friendly filter element change

The filter element can be removed from the housing together with the cover. The dirt retention valve ensures that solid particle sediment is completely removed with the filter element.



Switching functions

The selector valve is used to switch between the basic modes of operation: "filtering" and "pumping over without filtering".



Keeping hoses in place

The retainers attached to the sides of the frame secure the hoses in any transport position.



Compact design

Among the numerous advanced features, listed in the specification of the UM units, compact design was a basic requirement to be met by our team of design engineers. Transporting the UM in horizontal position, e.g. in the cargo area of a service vehicle, is facilitated by the wheels and the curved design of the frame.



Unbeatable ergonomics

Superior technology and excellent design are of no use if the operator can only move the service equipment with great physical effort. Therefore, ergonomics were of primary importance when designing the UM units.

Owing to its optimized weight distribution, the UM can be tilted from the standing position with minimum effort. In the tilted position, the UM can be moved walking upright, removing strain from the back

Cleaning speed

The cleaning speed depends on the efficiency of the filter elements ($\beta_{x(c)}$), the nominal volume flow ($Q_{nominal}$) and the oil volume (V_{actual}).

In graph D1-D2, the cleaning time is shown in relation to the filter fineness (indication of cleanliness classes according to ISO 4406:1999). The values are recorded by laboratory methods and may be influenced by environmental conditions (e.g. compared to the laboratory test dust ISO MTD considerably deviating particle constellations, continuous additional introduction of dirt on running systems, high water content, etc.).

All characteristic curves (see graphs D1-D2) relate to a **reference** oil volume of 180 l / 47.5 gallons and a nominal volume flow of 15 l/min / 4 gpm.

The following formula should be used to convert to the actual oil volume:

$$t_{actual} = \frac{V_{actual} \cdot \Delta t}{12 \cdot Q_{nominal}}$$

t_{actual} = actual cleaning speed

 Δt = cleaning speed for oil volume of 180 l /


47.5 gallons

 V_{actual} = volume of oil to be cleaned

Q_{nominal} = nominal volume flow, see Selection Chart

For monitoring purposes, we recommend the OPCom from ARGO-HYTOS, integrated in the version FAPC 016 or the OPCount Particle Counter.

Determining the cleaning time

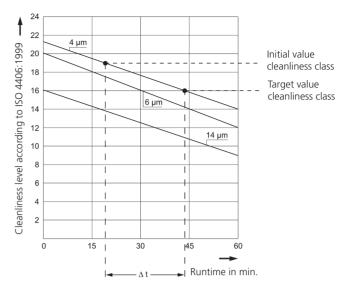


- Determine the initial cleanliness class and enter it on the graph, e. g. 19/17/14 according to ISO 4406:1999
- ➤ Enter the target cleanliness class on the graph, e.g. 16/14/11 according to ISO 4406:1999
- Determine Δt , in this case $\Delta t = 25$ min
- Insert the value in the formula, where V_{actual} = 350 I/ 92.5 gallons and Q_{nominal} = 16 I/min / 4.2 gpm


$$t_{actual} = \frac{V_{actual} \cdot \Delta t}{12 \cdot Q_{nominal}} = \frac{350 (92.5) \cdot 25}{12 \cdot 16 (4.2)} \approx 46 \text{ min}$$

Curves for the cleaning time as a function of the filter fineness

3EN2 and 5EN2 EXAPOR®MAX 2 filter element Reference oil volume with Q_{Off-line filter} =15 l/min / 4 gpm.

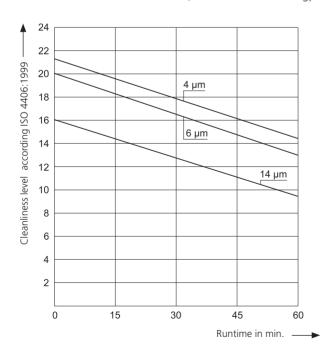


10EX2 EXAPOR®MAX 2 filter element
Reference oil volume with Q_{Off-line filter} =15 l/min / 4 gpm.

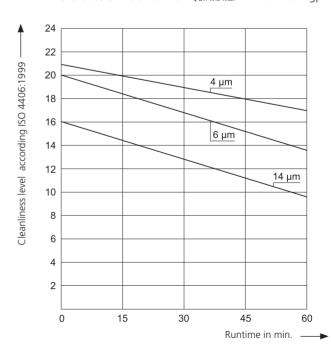

www.argo-hytos.com Page 61

Filter fineness curves in the selection chart

Filtration ratio β as a function of particle size x obtained by the Multi-Pass-Test according to ISO 16889

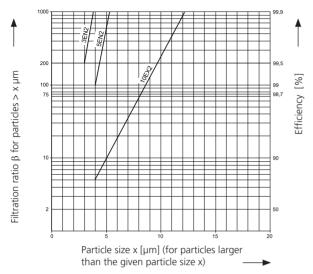

The abbreviations represent the following β -values resp. finenesses:

For EXAPOR®MAX2 elements:

| 3EN2 | = | $\overline{\beta}_{3(c)}$ | = 200 | EXAPOR®MAX 2 |
|-------|---|---------------------------|-------|--------------|
| 5EN2 | = | $\overline{\beta}_{5(c)}$ | = 200 | EXAPOR®MAX 2 |
| 10EX2 | = | | = 200 | EXAPOR®MAX 2 |

Characteristics

Hydraulic connection

Hoses:

Suction hose NG 32, length 2.7 m / 8.9 ft, with suction strainer 280 μ m, pressure hose NG 25, length 2.7 m / 8.9 ft.

Electrical connection / electric motor

Electric motor, air cooled fan type

Cable: length 6 m / 19.7 ft Electro motor types: $1 \sim 230 \text{ V} / 50 \text{ Hz}$ $3 \sim 400 \text{ V} / 60 \text{ Hz}$

Protection type: IP 54

(see Selection Chart)

Tank volume

Approx. 13 I / 3.4 gal

Pump design

Internal gear pump

Operating and transport position

Operating position: upright

Transport position: upright or horizontal

Hydraulic fluids

Mineral oil and biodegradable fluids (HEES and HETG, see info service sheet 00.20). Other fluids on request.

Temperature range of fluids

0 °C ... +65 °C / +32 °F ... +149 °F (also see table Viscosity Range)

Ambient temperature range

0 °C ... +50 °C / +32 °F ... +122 °F


Accessories


Water-absorbing filter elements EXAPOR®AQUA. These can be used for short-term water absorption in all standard units (on request).

Viscosity range

| Туре | Continuous operation min. | Continuous operation max. | Short-term operation max. |
|----------|-----------------------------------|--|--------------------------------------|
| UM 045 | 15 mm²/s / 70 SUS | 600 mm ² /s / 2790 SUS | 800 mm ² /s / 3720 SUS |
| UMPC 045 | 15 mm ² /s / 70 SUS | 250 mm ² /s* / 1160 SUS* 600 mm ² /s* / 2790 SUS* | 800 mm ² /s / 3720 SUS |


^{*} An exact measurement of the oil cleanliness class is only possible within a viscosity range from 15 mm²/s to 250 mm²/s / 70 SUS to 1160 SUS.

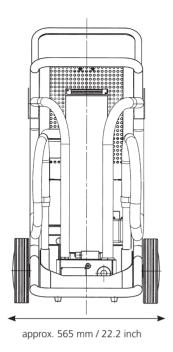

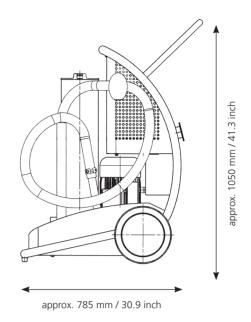


Hydraulic symbol - UM 045

1



Hydraulic symbol - UMPC 045

2

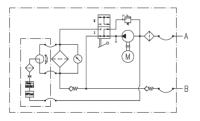

www.argo-hytos.com Page 63

| Cheria. Statistical life in the control of the cont | | | | | | | | | | | | | |
|--|--------------------------|------|--------|--------------------------------|----------|----------|----------------|-----------------------------|-----------------|---|-------------|---------|--------------------|
| Basic model – UM 045 | | | | | | | | | | | | | |
| UM 045-1553 | 45 l/min** 11.9 gpm** | 3EN2 | 1950 g | 1~230 V | 50/60 Hz | 1.1 kW** | 2.7 m / 8.9 ft | 15 600 mm²/s 70 2790 SUS | 2.0 m 6.6 ft | 1 | V7.1560-103 | optical | 76.5 kg 169 lbs |
| UM 045-4553 | 45 l/min** 11.9 gpm** | 3EN2 | 1950 g | 3~400 V 50 Hz 3~460 V 60 Hz | 50/60 Hz | 1.1 kW** | 2.7 m / 8.9 ft | 15 600 mm²/s 70 2790 SUS | | 1 | V7.1560-103 | optical | 76.5 kg 169 lbs |
| UM 045-1153 | 45 l/min** 11.9 gpm** | 5EN2 | 1980 g | 1~230 V | 50/60 Hz | 1.1 kW** | 2.7 m / 8.9 ft | 15 600 mm²/s 70 2790 SUS | | 1 | V7.1560-03 | optical | 76.5 kg 169 lbs |
| UM 045-4153 | 45 l/min** 11.9 gpm** | 5EN2 | 1980 g | 3~400 V 50 Hz 3~460 V 60 Hz | 50/60 Hz | 1.1 kW** | 2.7 m / 8.9 ft | 15 600 mm²/s 70 2790 SUS | | 1 | V7.1560-03 | optical | 76.5 kg 169 lbs |

| UM with integrated Particle Monitor OPCom – UMPC 045 | | | | | | | | | | | | | |
|--|--------------------------|------|--------|--------------------------------|----------|----------|----------------|-----------------------------|-----------------|---|-------------|---------|------------------|
| | 45 l/min** 11.9 gpm** | 3EN2 | 1950 g | 1~230 V | 50/60 Hz | 1.1 kW** | 2.7 m / 8.9 ft | 15 600 mm²/s 70 2790 SUS | | 2 | V7.1560-103 | electr. | 97 kg 214 lbs |
| UMPC 045-15835 | 45 l/min** 11.9 gpm** | 3EN2 | 1950 g | 1~230 V | 50/60 Hz | 1.1 kW** | 2.7 m / 8.9 ft | 15 600 mm²/s 70 2790 SUS | | 2 | V7.1560-103 | electr. | 97 kg 214 lbs |
| UMPC 045-45735 | 45 l/min** 11.9 gpm** | 3EN2 | 1950 g | 3~400 V 50 Hz 3~460 V 60 Hz | 50/60 Hz | 1.1 kW** | 2.7 m / 8.9 ft | 15 600 mm²/s 70 2790 SUS | 2.0 m 6.6 ft | 2 | V7.1560-103 | electr. | 97 kg 214 lbs |
| UMPC 045-45835 | 45 l/min** 11.9 gpm** | 3EN2 | 1950 g | 3~400 V 50 Hz 3~460 V 60 Hz | 50/60 Hz | 1.1 kW** | 2.7 m / 8.9 ft | 15 600 mm²/s 70 2790 SUS | | 2 | V7.1560-103 | electr. | 97 kg 214 lbs |

Please request our data sheet no. 100.10 for more detailed information on the OPCom Particle Monitor.

- * The exact determination of the cleanliness class is possible in a viscosity range of 15 mm²/s to 250 mm²/s / 70 SUS to 1160 SUS.
- ** Indications at 50 Hz. At 60 Hz the value increases by 20 %.
- *** H_2O + OPCom Particle Monitor, function see description
- **** H₂O+ II + OPCom Particle Monitor, function see description

Other versions on request.

Filter elements:

see Selection Chart.

Water-absorbing filter elements EXAPOR®AQUA on request.

Accessories:

Hose extensions on request.

For the appropriate clogging indicators see datasheet 60.20.

Page 64 www.argo-hytos.com